



TOOL CABINET

Manual

79920000 / 79920001 / 79920030



CHESTS

Chests that have no front locking panel are equipped with a locking mechanism actuating by the lid. When the lid is closed, lock bar tabs engage the pockets on the drawer. When the lid is open, tabs are raised.




Drawers must be fully closed before the lid is shut. DO NOT slam drawers when the lid is shut as they may damage lock bar tabs or lock pockets.

If the damage happens and deforms, please remove out the drawer and use a screwdriver to adjust deformed parts on two lock pockets(L & R) and lock bar tabs.

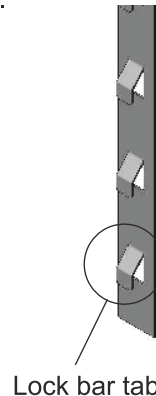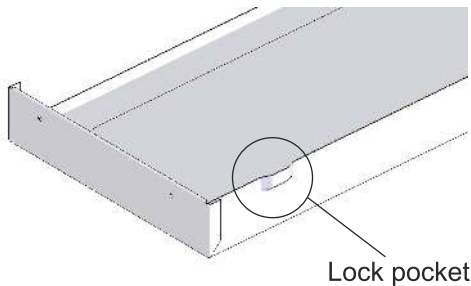

TROLLEYS


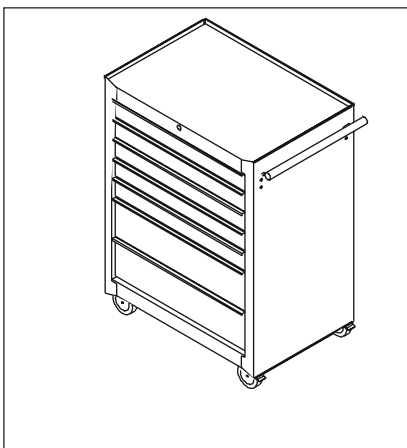


TROLLEYS

Locking mechanism used on trolleys is engaged by rotating cam lock with a key.




Drawers should be fully closed before locking mechanism is engaged. If drawers are not fully closed when locking mechanism has been engaged, just close it and it will be locked automatically.

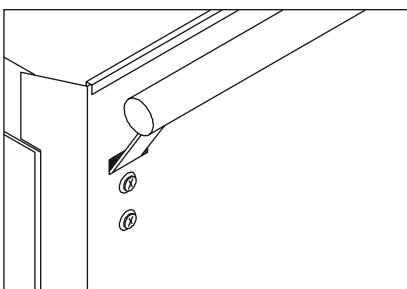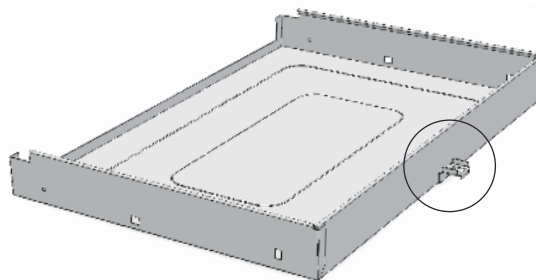

SIDE HANDLE

- Fixed the side handle with screws
- Must be fixed on the same side as swivel casters.


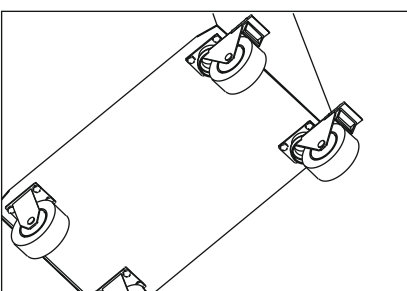


CASTER

- Fixed casters, swivel casters.
- swivel casters must be fixed on the same side.

TOOL CHESTS & TROLLEYS


Please read these instructions carefully.

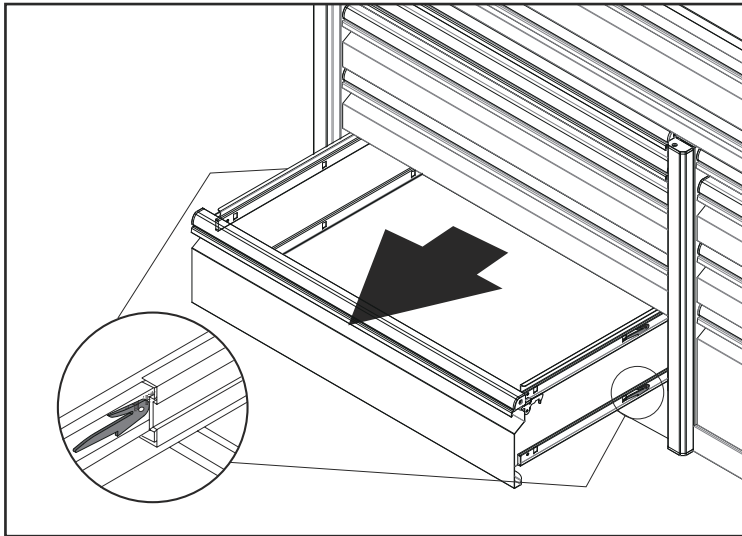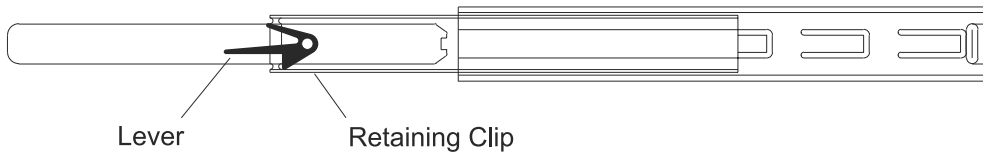

HOW TO REMOVE DRAWERS

To remove the drawer:

1. To remove the drawer, release the retaining clips by pushing the lever up on one side and down on the other side simultaneously.
2. Pull the drawer out.

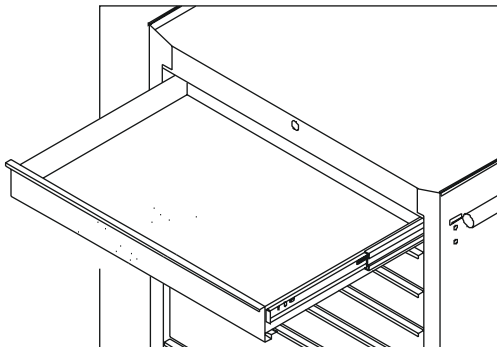

HOW TO INSTALL DRAWERS ?

Pull the slide out and then match the track to push in.



ATTENTION:

1. When installing the drawer, it is normal that you feel tight when pushing in the drawer.
2. Please push the drawer into the end and pull out for 2-3 times to check whether the drawer moves smoothly or not.
 - a. If the drawer is tight or blocked, it means you are failed to install the drawer, please. take out the drawer and install again.
 - b. If the drawer moves smoothly, it means you are successful to install the drawer.

LUBRICATION

It is important for the smooth operation of sliders to lubricate them periodically with light grease or petroleum jelly. This should be done at least twice a year or more frequently depending on usage.



pichler.tools



[/pichlerwerkzeug](https://facebook.com/pichlerwerkzeug)



[/pichlerwerkzeug](https://instagram.com/pichlerwerkzeug)



[/pichlerwerkzeug](https://youtube.com/pichlerwerkzeug)

AUSTRIA

 at@pichler.tools
 +43 512 344 552

GERMANY

 de@pichler.tools
 +49 8821 686 9780

SWITZERLAND

 ch@pichler.tools
 +41 61 981 33 55

FRANCE

 fr@pichler.tools
 +33 3 89 551 596

UK & IRELAND

 uk@pichler.tools
 +44 1335 360 759

BELGIUM

 be@pichler.tools
 +32 495 400 810

ITALY

 it@pichler.tools
 +39 0472 970 042