



SPECIAL TAPS SET

Manual

90411200



PICHLER
built to succeed.

SAFETY NOTICE

To understand the functioning of the tools, is it necessary to read the manual first!



ATTENTION

Special caution



CORRECT



LIGHT BULB

Hint or recommendation



WRONG




SAFETY GOGGLES

Wearing safety goggles necessary

SPECIAL TAPS SET

90411200

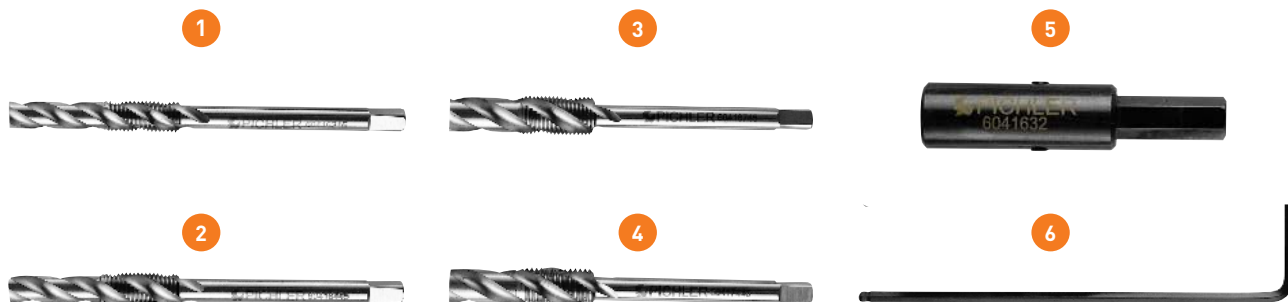

No	Part no.	Description	90411200
1	60416345	Tap M8x1	1
2	60416445	Tap M9x1	1
3	60418745	Tap M10x1	1
4	60417445	Tap M10x1,25	1
5	6041632	Universal Tap Holder	1
6	151.2042	Allen hex key 2mm	1



CLEANING AND RETHREADING THE GLOW PLUG MOUNTING THREAD IN A CYLINDER HEAD

Clamp the appropriate Tap for **60416345** ① / M9x1 **60416445** ② / M10x1 **60418745** ③ / M10x1,25 **60417445** ④ in the Tap Holder **6041632** ⑤.

Coat the clamped Tap with grease.

Insert the Tap with the guide pin first, into the glow plug hole and cleaning rethread the fixing thread in the cylinder head. Remove with a vacuum cleaner, a magnet or compressed air the grime and swarf from the glow plug shaft.



RECOMMENDED ACCESSORIES

MAGNETIC PICK UP TOOL SIZE 2

52601020 460 mm long



RATCHET TAP WRENCH

6041738 long M3-M8

6041768 short M5-M12



MACHINE TAP EXTENSION

6041637





pichler.tools



/pichlerwerkzeug



/pichlerwerkzeug



/pichlerwerkzeug

AUSTRIA

✉ at@pichler.tools
☎ +43 512 344 552

GERMANY

✉ de@pichler.tools
☎ +49 8821 686 9780

SWITZERLAND

✉ ch@pichler.tools
☎ +41 61 981 33 55

FRANCE

✉ fr@pichler.tools
☎ +33 3 89 551 596

UK & IRELAND

✉ uk@pichler.tools
☎ +44 1335 360 759

BELGIUM

✉ be@pichler.tools
☎ +32 495 400 810

ITALY

✉ it@pichler.tools
☎ +39 472 970 042

